

CIRCUIT DRAWN WITH POWER SUPPLY OFF


FOR TYPICAL REMOTE CONTROL  
DETAILS SEE DOCUMENT  
RWS300

TRANSFORMER TAPPING OPTIONS

VOLTAGE	50HZ	60HZ
LOW	92-135	92-135
HIGH	184-270	184-270

FUSE FS1 - 500mA ANTI-SURGE  
ALL TRANSFORMER TYPES - PS1 SELF  
RESETTING FUSE

CAPACITOR START/RUN  
(CS/CS2 and CR/CR2)  
COMBINATIONS & VALUES VARY WITH  
SUPPLY VOLTAGE & ACTUATOR SIZE.

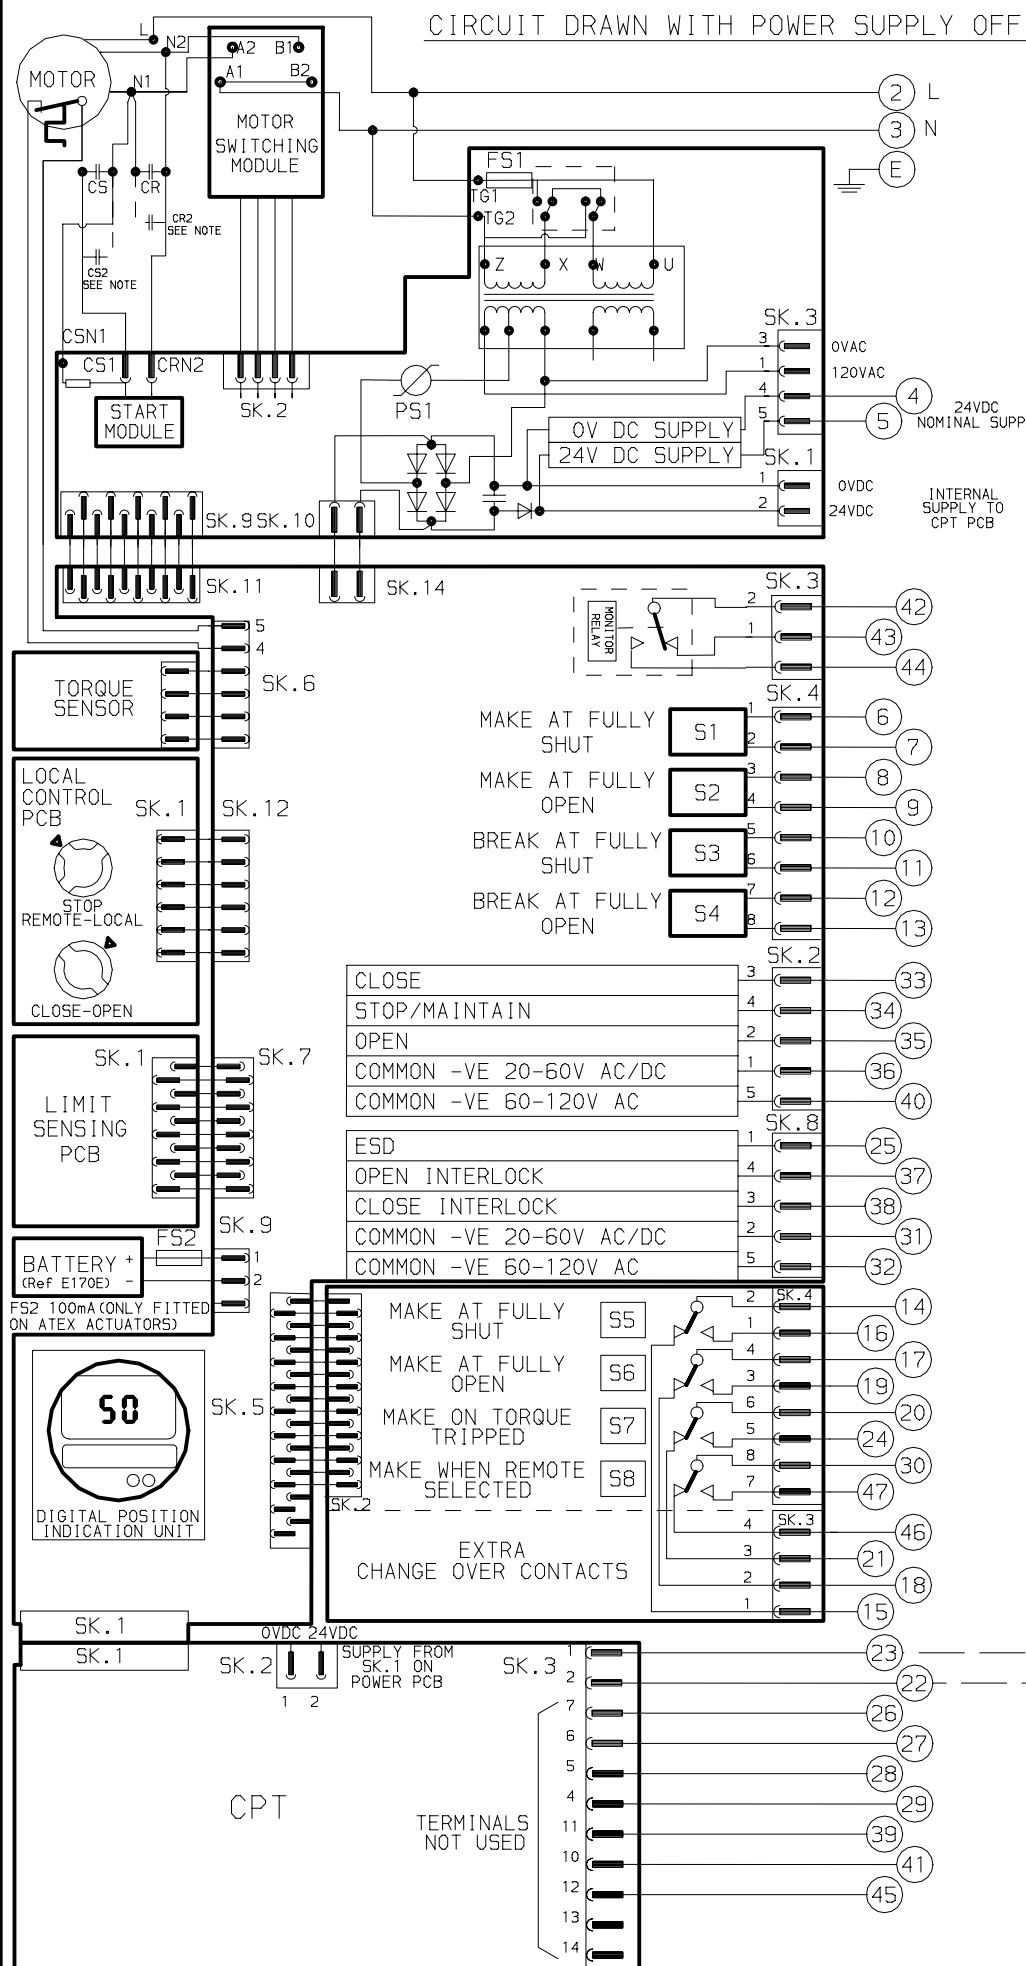

NOTE

REFER TO PUBLICATION E170E FOR  
APPROVED FUSES FS1 AND FS2.

 
MAX EXTERNAL LOAD ON TERMINALS  
4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES  
TO BE MINIMUM 'ON' 20V AC/DC  
MAXIMUM 'OFF' = 3V  
MINIMUM CONTROL SIGNAL DURATION  
TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE  
CONTROL SIGNAL IS 5mA ON 24V DC  
OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END  
BY TERMINAL No. OR TAG No.

INDICATION CONTACTS S1-S4 AND EXTRA  
INDICATION CONTACTS S5-S8 ARE SHOWN  
IN THEIR DEFAULT CONFIGURATION.  
CONTACTS MAY BE CONFIGURED FOR ANY  
OF THE FUNCTIONS DESCRIBED IN E170E



FOR DETAILS OF CPT FUNCTIONS  
REFER TO ROTORK PUBLICATION E120E

No	DATE	REVISION DETAILS
04	110407	IQ PRO UPDATE. EC2198/1

**www.rotork.com**

ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel:01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel:585-328-1550
---------------------------------------------------------------------	-----------------------------------------------------------------------

CONFIG BY PRE  
DATE 081004  
CHECKED PJW  
BASE WD --  
JOB No --  
M.I.No .

IQ + CPT + INDICATION  
CONTACTS, S/PHASE

CIRCUIT DIAGRAM No -REV 102  
**3111-000-04**

B1	C1	B2	C2	B1	C1	M1	V1
----	----	----	----	----	----	----	----