



FOR TYPICAL REMOTE CONTROL DETAILS SEE DOCUMENT RWS304

TRANSFORMER TAPPING OPTIONS

TYPE 1

TAP	NOM 50/60HZ	50HZ	60HZ
W	220/230	176-242	198-259
X	380/400	304-418	342-446
Y	415/420	332-457	374-487
Z	440/460	352-484	396-517

FUSE FS1 - 250mA ANTI-SURGE

TYPE 2

TAP	NOM 50/60HZ	50HZ	60HZ
W	346/380	285-388	321-419
X	480/500	406-552	432-564
Y	240/240	192-261	216-282
Z	550/575	445-605	501-654

FUSE FS1 - 250mA ANTI-SURGE

TYPE 3

TAP	NOM 50/60HZ	50HZ	60HZ
X	660/660-690	534-726	600-726
Y	690/---	558-759	

FUSE FS1 - 150mA ANTI-SURGE

ALL TRANSFORMER TYPES - PS1 SELF RESETTING FUSE

NOTE

REFER TO PUBLICATION E170E FOR APPROVED FUSES FS1 AND FS2.

MAX EXTERNAL LOAD ON TERMINALS 4 & 5 TO BE 5W.

CONTROL SIGNAL THRESHOLD VOLTAGES TO BE MINIMUM 'ON' 20V AC/DC
 MAXIMUM 'OFF' = 3V
 MINIMUM CONTROL SIGNAL DURATION TO BE 300mS.

CURRENT DRAWN FROM EACH REMOTE CONTROL SIGNAL IS 5mA ON 24V DC OR 12mA ON 120V AC

WIRES ARE IDENTIFIED AT EACH END BY TERMINAL No. OR TAG No.

INDICATION CONTACTS S1-S4 AND EXTRA INDICATION CONTACTS S5-S8 ARE SHOWN IN THEIR DEFAULT CONFIGURATION. CONTACTS MAY BE CONFIGURED FOR ANY OF THE FUNCTIONS DESCRIBED IN E170E

No	DATE	REVISION DETAILS
02	301004	DIAGRAM RE-FORMATTED TO SEPERATE REMOTE CONTROL CIRCUITRY (See 'RWS' Ref)

www.rotork.com

ROTORK CONTROLS LTD
 BATH, BA1 3JQ
 ENGLAND
 Tel: 01225-733200

ROTORK CONTROLS INC
 ROCHESTER
 NY 14624, USA
 Tel: 585-328-1550

CONFIG BY PRE
 DATE 081004
 CHECKED PJW
 BASE WD 3100N000
 JOB No --
 M.I.No .

IQBASIC + NEG SW REM & INDICATION RELAYS

CIRCUIT DIAGRAM No -REV 102

3100N000-02

B1 C1 B2 C2 B1 C1 M1 V1