

CIRCUIT DRAWN WITH
POWER SUPPLY OFF


FOR TYPICAL REMOTE CONTROL
DETAILS SEE DOCUMENT
No RWS

TRANSFORMER TAPPING OPTIONS

VOLTAGE	50HZ	60HZ
LOW	92-135	92-135
HIGH	184-270	184-270

FUSE FS1 - 500mA ANTI-SURGE
ALL TRANSFORMER TYPES - PS1 SELF
RESETTING
FUSE

CAPACITOR START/RUN
(CS/CS2 and CR/CR2)
COMBINATIONS & VALUES VARY WITH
SUPPLY VOLTAGE & ACTUATOR SIZE.

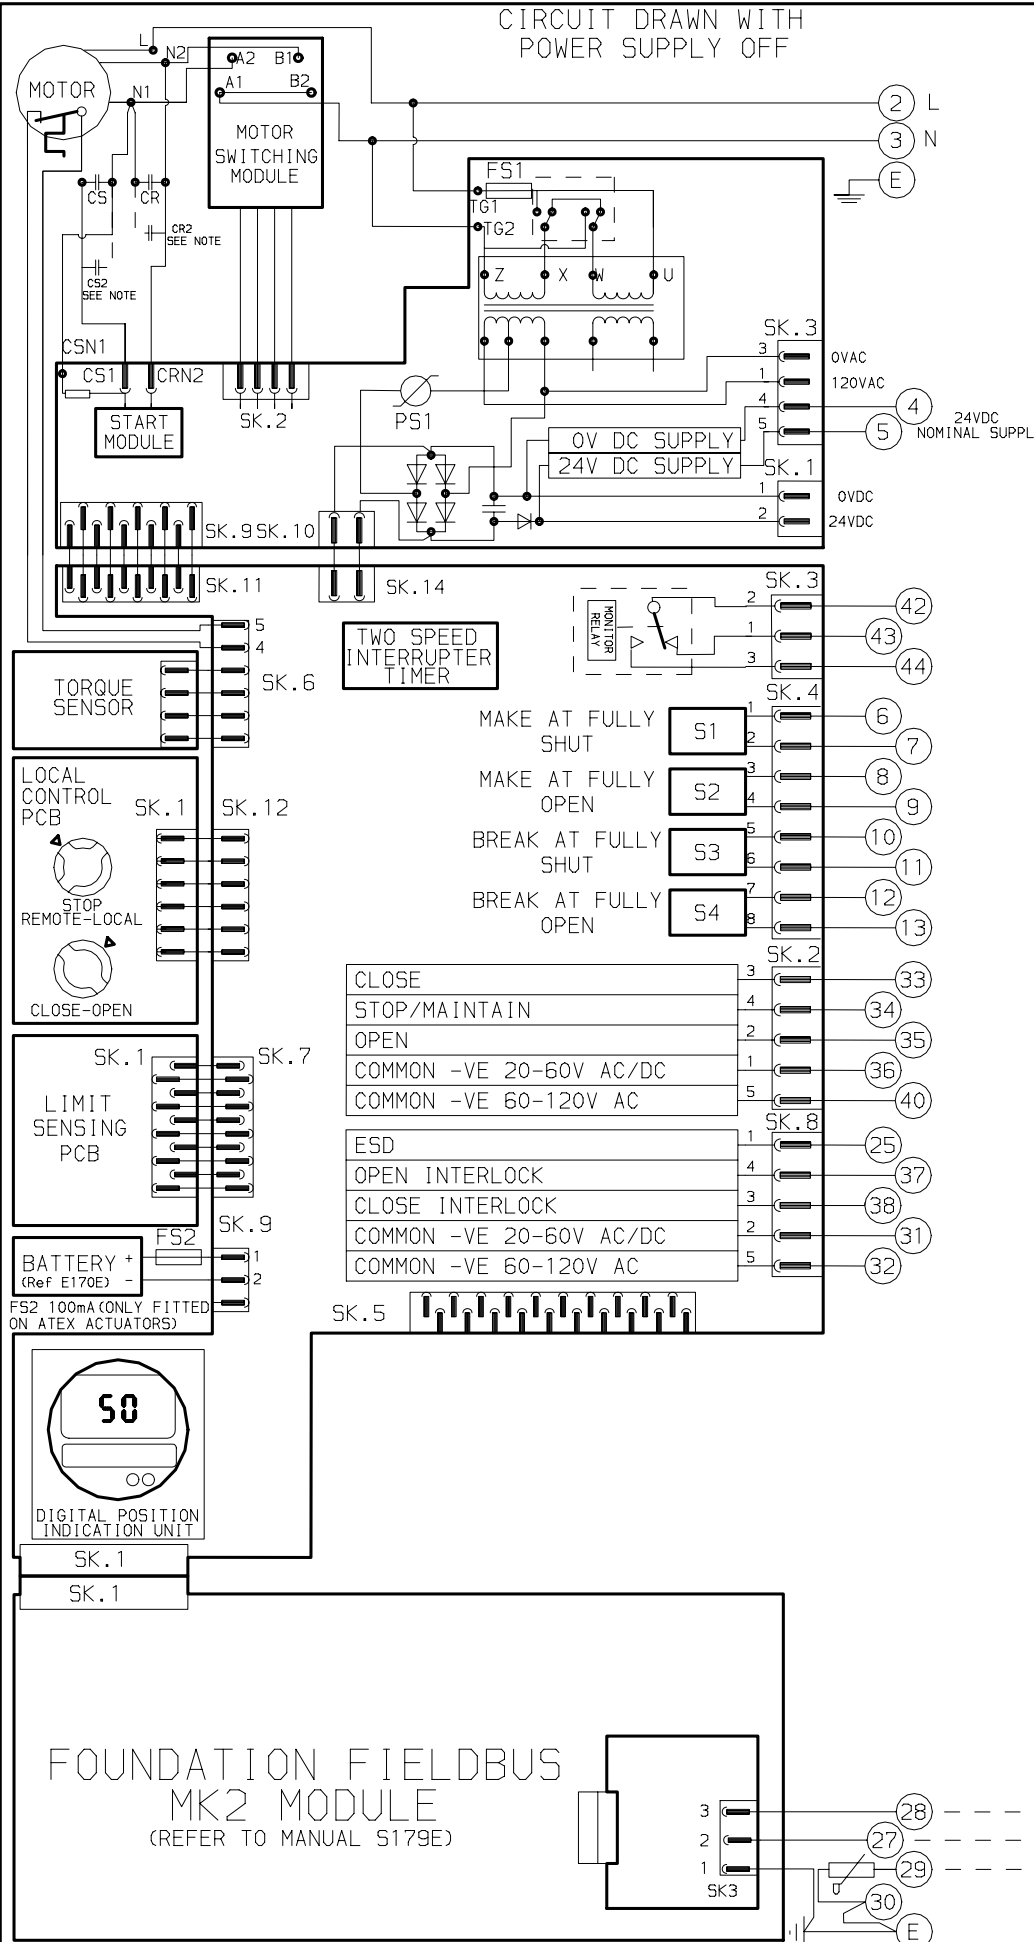

NOTE
REFER TO PUBLICATION E170E FOR
APPROVED FUSES FS1 AND FS2.
MAX EXTERNAL LOAD ON TERMINALS
4 & 5 TO BE 5W.
CONTROL SIGNAL THRESHOLD VOLTAGES
TO BE MINIMUM 'ON' 20V AC/DC
MAXIMUM 'OFF' = 3V
MINIMUM CONTROL SIGNAL DURATION
TO BE 300mS.
CURRENT DRAWN FROM EACH REMOTE
CONTROL SIGNAL IS 5mA ON 24V DC
OR 12mA ON 120V AC
WIRES ARE IDENTIFIED AT EACH END
BY TERMINAL No. OR TAG No.
FOR TYPICAL REMOTE CONTROL
INDICATING, MONITORING AND ALARM
CIRCUITS SEE PUBLICATION E120E

FIELD CONNECTION '-'
FIELD CONNECTION '+'
SCREEN
INDICATION CONTACTS S1-S4 ARE SHOWN
IN THEIR DEFAULT CONFIGURATION.
CONTACTS MAY BE CONFIGURED FOR ANY
OF THE FUNCTIONS DESCRIBED IN E170E

No 01	DATE	REVISION DETAILS	www.rotork.com		CONFIG BY PJW	IQ + FOUNDATION F/BUS + TIMER SINGLE PHASE
			ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND Tel: 01225-733200	ROTORK CONTROLS INC ROCHESTER NY 14624, USA Tel: 585-328-1550	DATE 170907 CHECKED JC1 BASE WD 3001-810 JOB No - M.I.No -	
FOUNDATION FIELDBUS MK2 MODULE (REFER TO MANUAL S179E)						CIRCUIT DIAGRAM No -REV 3001-810-01
						B1 C1 B2 C2